



+
NEW
PRODUCT
WECO ELEVATOR PRODUCTS

AIR PURIFICATION SYSTEM 04.PAP.S4T3

USER MANUAL

WECO

VERSION 00.PAP.V1



AIR PURIFICATION SYSTEM


04.PAP.S4T3

Plasma air purification technology effectively prevents and eliminates viruses such as (HCoV), H1N1 and EV71, allergens, pollutants and odours. At the same time, the ionization releases OH- radicals, that improves significantly the air quality.




+ NEW PRODUCT

DIMENSIONS

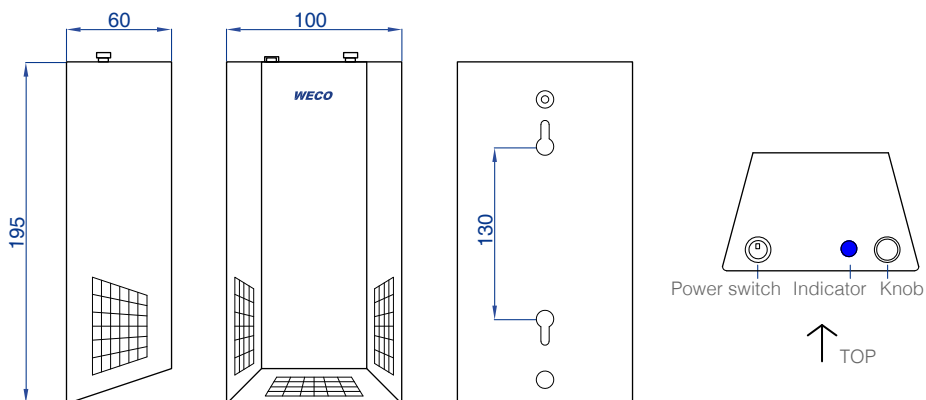

INSTALLATION

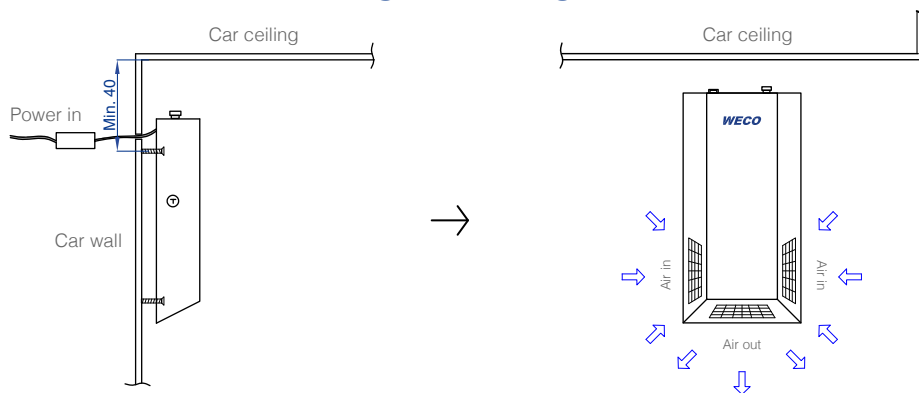

INSTALLATION INSTRUCTIONS

1. Remove the front cover and drill 3 holes in the wall, using the fixing point holes as a guide.
 2. Fix the unit to the wall using the bolts provided.
 3. Replace the front cover.
 4. Connect the power supply cable to mains power.
 5. Switch on the unit.
-

TECHNICAL FEATURES

Input voltage	220VAC±10 50/60Hz	Air volume	15m ³ /h	Noise level	<=50dB
Working voltage	12VDC	Ion tube size	60mm	Housing material	Aluminium
Power	7W	Ion tube quantity	1 piece	Working temp.	-20 to 60°C
Purifying area	5-15m ²	Ion tube life span	20,000 hours	Storage temp.	-25 to 65°C

TROUBLESHOOTING

1. The power indicator and LED indicator are not lit.
Check if the power supply cable is correctly connected.
Check if the mains power is on.
 2. Plasma generator:
Whilst functioning normally, you will see a faint blue light and hear a slight noise generated by the current. If you do not see and hear these, the ion tube may be broken and may require replacing.
-

WECO

www.wecoeurope.com
info@wecoeurope.com